

User Manual

# ATTACHABLE LOOP-POWERED INDICATOR

## Model 1800-0




### CORPORATE HEADQUARTERS

1010 West Bagley Road  
Berea, Ohio 44017  
440-243-0888  
440-243-3472 Fax  
E-mail: [noshok@noshok.com](mailto:noshok@noshok.com)  
Web: [www.noshok.com](http://www.noshok.com)

**NOSHOK**

UM1800-03

**NOSHOK**

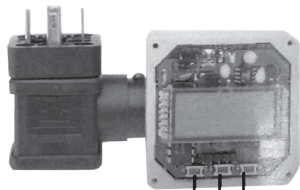

A B C

To install, remove the DIN 43650A plug and insert the model 1800-0 indicator on top of transducer and reinstall the plug. This indicator is designed for use with NOSHOK transmitters with 2-wire 4 mA to 20 mA output and Hirschmann DIN 43650A connector.

To program, first remove the cover from the indicator housing and identify the buttons A, B, and C. These buttons are used to program the indicator to match the pressure range of the transmitter.

A → down

B → program steps

C → up

1. Set the decimal point

1 x B: 

d	P		
---	---	--	--

→ C/A up or down:

2. Set the lower end of the range

2 x B: 

A	n		4
---	---	--	---

→ C/A up or down:

3. Set the upper end of the range

3 x B: 

A	n	2	0
---	---	---	---

→ C/A up or down:

4. To enable error codes

4 x B: 

L	1		
---	---	--	--

1 x C: 

			1
--	--	--	---

 on

1 x A: 

			0
--	--	--	---

 off

→ C/A up or down

Errors are shown as F1 for an underrange condition, and F2 for an overrange condition

5. Set digital filtering value

5 x B: 

F	I	L	T
---	---	---	---

1 x C: 

			0
--	--	--	---

 0.2 seconds

2 x C: 

			1
--	--	--	---

 0.5 seconds

3 x C: 

			2
--	--	--	---

 1.0 seconds

4 x C: 

			3
--	--	--	---

 1.5 seconds

→ C/A up or down

6. Return to measurement mode

2 x A